

# SHELL

## Square - Pendant - Reinforced Cable - Remote Driver

LUMENWERX

**!** This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.


Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.

**!** Wire dimming conductors as Class 1.

**!** Do not handle fixture by the wires.


### 1 INSTALL THE REMOTE DRIVER BOX.

Please refer to the remote driver box installation sheet for more information.

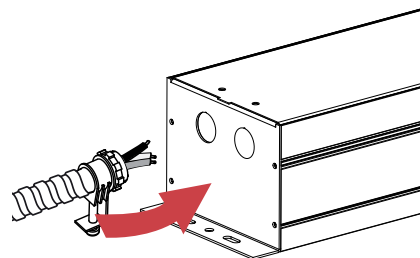

### 2 DISASSEMBLE THE CANOPY.


Lower the canopy [A] and the cone [B] along the reinforced cable [C].

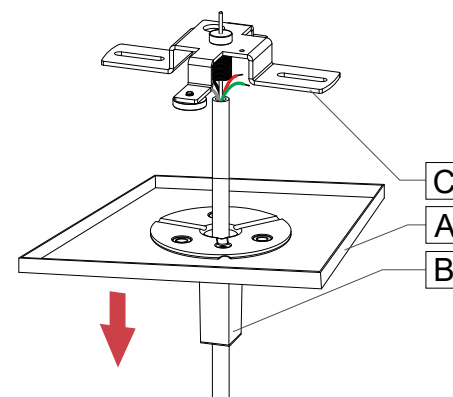

### 3 MAKE ELECTRICAL CONNECTION.


Make the low voltage electrical connection between the remote driver wire [D] and the fixture wires [E] using wire nuts [F].

**Warning:** Power must come from single branch circuit.

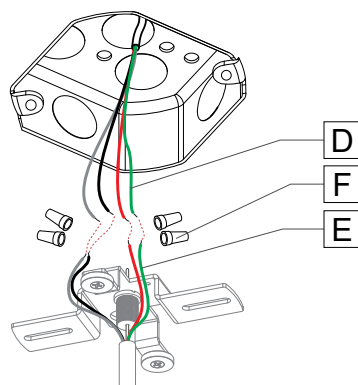

### 4 INSTALL CROSS-BRACKET.

Install the cross-bracket [G] on the J-box [H] with screws [I].

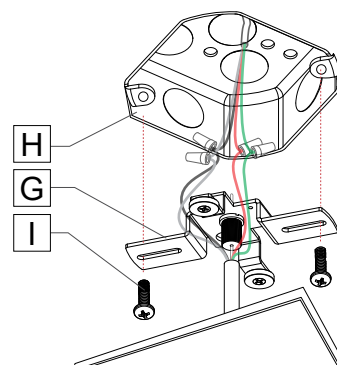

### 5 INSTALL THE CANOPY.

Attach the canopy [A] and the cone [B] on the magnetic cross-bracket [G].

