

SHELL

Square - Pendant - Stem - Remote Driver

LUMENWERX



This product must be installed in accordance with the National Electrical Code and all applicable local codes, by a person familiar with the construction and operation of the product, and the hazards involved. Proper grounding is required for safety.

Ce produit doit être installé suivant le code national de l'électricité, ainsi que tous les codes locaux applicables, par une personne familière avec la construction et le fonctionnement du produit, ainsi que tous les risques qui y sont associés. La mise à terre électrique est obligatoire pour la sécurité.



Wire dimming conductors as Class 1.




Do not handle fixture by the wires.



Shown with Shell 8" x 8". Applicable for all sizes.



1 INSTALL THE REMOTE DRIVER BOX.

Please refer to the remote driver box installation sheet for more information.

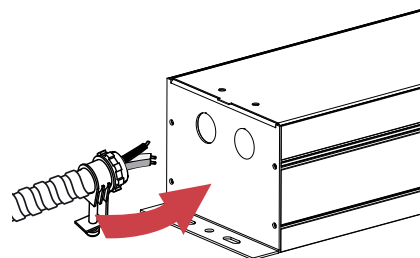


2 INSTALL STEM.

Pass the wires through the stem [A]. Screw stem into the fixture cone [B].

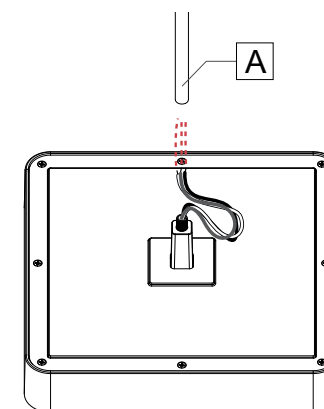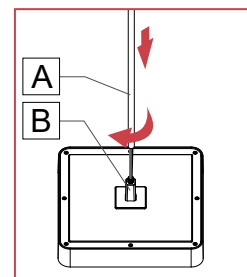


3 PASS WIRES THROUGH CROSS-BRACKET.

Lower the canopy [C] and the canopy cone [D] along the stem [A]. Pass the fixture wires [E] through the middle hole of the cross-bracket [F] and nut [G].

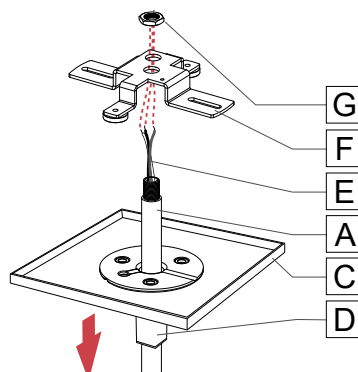

4 INSTALL THE STEM INTO CROSS-BRACKET.

Install the cross-bracket [F] on the stem [A] using the nut [G].

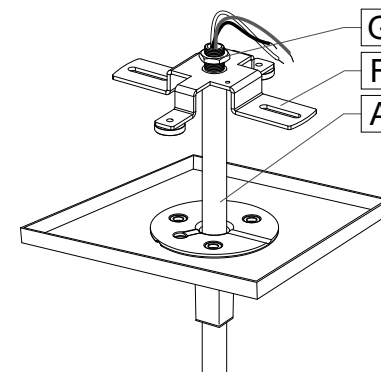

SHELL


Square - Pendant - Stem - Remote Driver

LUMENWERX

5 MAKE ELECTRICAL CONNECTION.


Make the low voltage electrical connection between the remote driver wires [H] and the fixture wires [E] using wire nuts [I].

Warning: Power must come from single branch circuit.

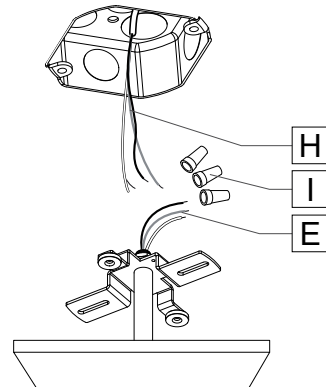

6 INSTALL CROSS-BRACKET.

Install the cross-bracket [F] on the J-box [J] with screws [K].

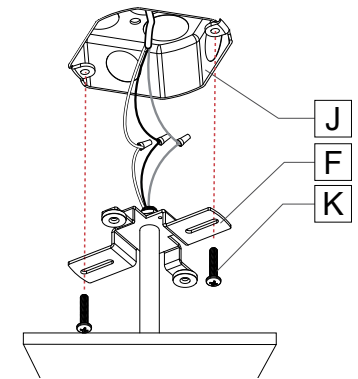

7 INSTALL THE CANOPY.

Attach the canopy [C] and the canopy cone [D] on the magnetic cross-bracket [F].

